










**GLEN DIMPLEX
AUSTRALIA PTY LTD**

GDP600-900-1200


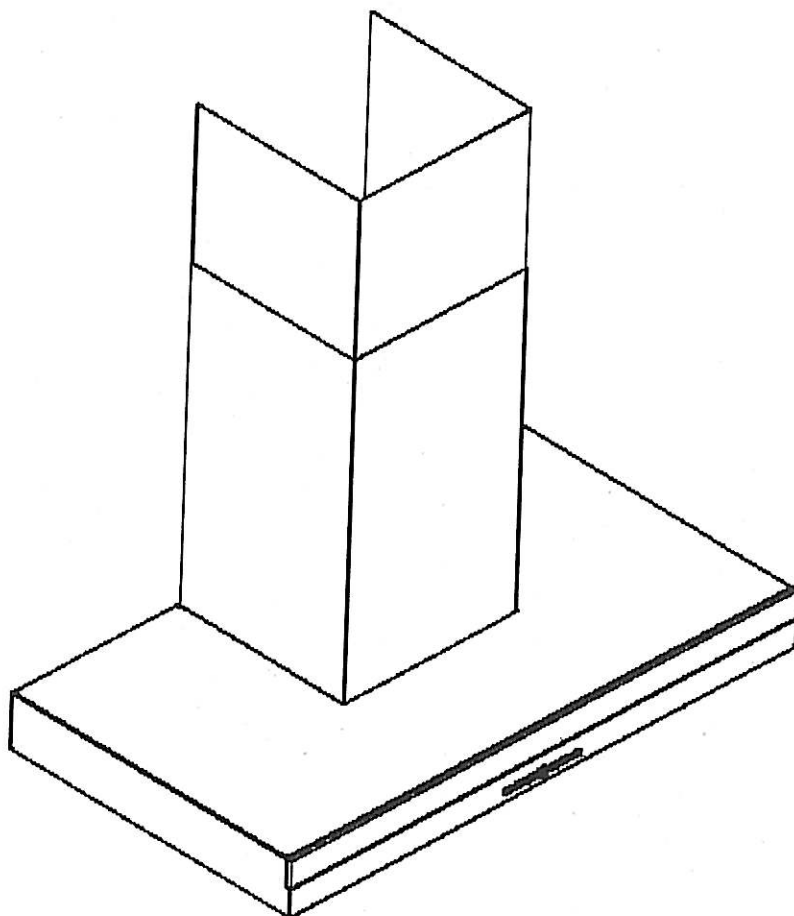


Glen Dimplex Australia
Unit 2/205 Abbots Road
Dandenong VIC 3175
Customer Care: 1300 556 816


Instructions on mounting and use.

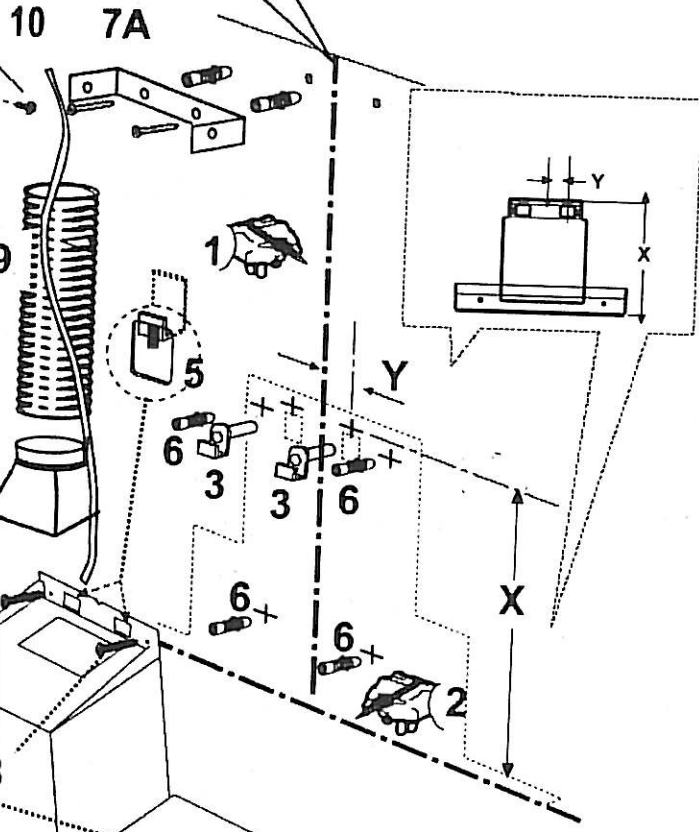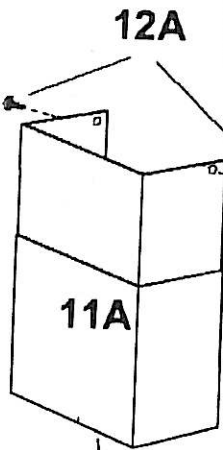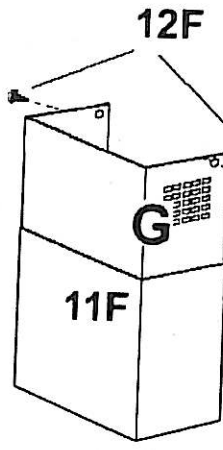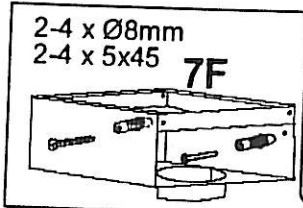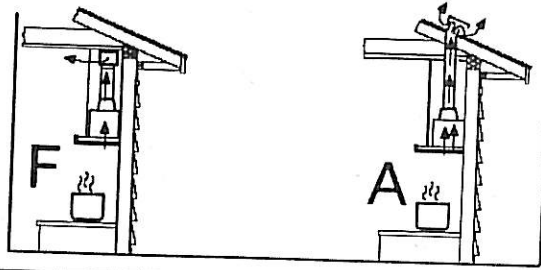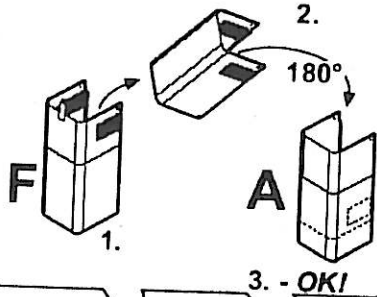

Charcoal Filter

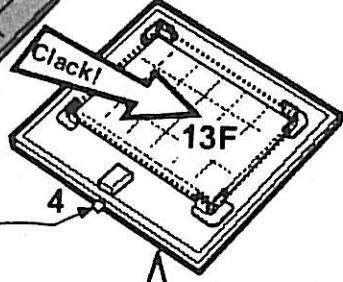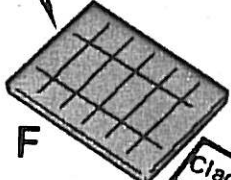

Anti-grease Filter

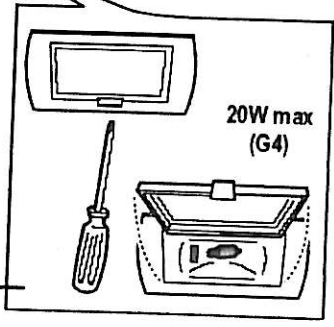

Instruction on Mounting and Use

Consult the designs in the front pages referenced in the text by alphabet letters. **Closely follow the instructions set out in this manual.** All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined.

Installation

The cooker hood must be placed at a minimum distance of 65 cm from the cooking plane for electric cookers and 75cm for gas or mixed cookers.

If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account.

Do not tile, grout or silicone this appliance to the wall. Surface mounting only. Do not fix chimney flue to furniture or fly over shelves unless the chimney flue can be easily removed, in case maintenance is ever required.

Use

The cooker hood is provided with an upper air exit B for discharging fumes externally for models including chimney flue C (Suction Version A- exhaust pipe not supplied).

If cooking fumes and vapours cannot be externally discharged, the cooker hood can be used in the **recirculating version F**: the installation of 1 active charcoal filter F allows the recirculation of fumes and vapours through the upper grid G.

Electrical connection

The electrical tension must correspond to the tension noted on the label placed inside the cooker hood. Connect the electrical plug, where provided, to the an easily accessible outlet in conformity with local standards in force.







Where an electrical plug is not provided (for direct connection to electrical network) place a standards approved bipolar switch with an aperture distance of not less than 3mm (accessible) from the contacts.

Operation


INSTRUCTIONS FOR USE WITH DS ELECTRONIC KEYBOARD


Six keys + display



-  Lights ON/OFF
-  Motor speed ON/OFF
-  Reset filters
-  speed reduction switch
-  speed increase switch
-  Timer

 Lights ON/OFF


 Motor ON/OFF: at switch-on the hood starts at the level at which it was switched off the last time.

 **Reset filters:** this key resets the functions of the metal anti-fat filter saturation (1) and substitution of the carbon filter(2). The key has to be held pressed for a few seconds.


(1) After 40 hours of activity of the hood the F symbol and the speed function set flash alternatively in the DISPLAY to indicate that the metal anti-fat filters need to be cleaned.

(2) After 120 hours of activity of the hood the F symbol and the speed function set flash alternatively in the DISPLAY to indicate that the carbon filters have to be substituted.

DISPLAY shows the last functioning speed and possibly the timer.

 **Increase of the functioning speed.**

 **Reduction of the functioning speed.**

 **Timer:** when the timer is activated the hood remains on at the functioning speed set for 5 minutes and then switches off automatically.

Maintenance

Prior to any maintenance operation ensure that the cooker hood is disconnected from the electrical outlet.

Cleaning

The cooker hood should be cleaned regularly internally and externally.

For cleaning use a cloth moistened with denatured alcohol or neutral liquid detergents. Avoid abrasive detergents.

Warning: Failure to carry out the basic standards of the cleaning of the cooker hood and replacement of the filters may cause fire risks. Therefore we recommend observing these instructions.

Anti-grease Filter:

must be cleaned once a month, with non abrasive detergents, by hand or in dishwasher on low temperature and short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity.

Charcoal Filter - (only for filter version)

The active charcoal filters E are not washable nor regenerative. It should be changed every 6 months in normal use. *The active charcoal filters capture unpleasant cooking odours.*

Replacing lightbulbs

Warning! Prior to touching the light bulbs ensure they are cooled down.

Extract the lamp cover by levering it off with a small screwdriver or similar tool.

Replace the damaged light bulb.

Only use halogen bulbs of 20W max (G4), making sure you do not touch them with your hands.

Close the lamp cover (it will snap shut).

Instruction on Mounting and Use cont...


Caution

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.

Do not use the cooker hood where the grill is not correctly fixed! The suctioned air must not be conveyed in the same channel used for fumes discharged by appliances powered by other than electricity. The environment must always be adequately aerated when the cooker hood and other appliances powered by other than electricity are used at the same time. Flambé cooking with a cooker hood is prohibited. The use of a free flame is damaging to the filters and may cause fire accidents, therefore free flame cooking must be avoided. Frying of foods must be kept under close control in order to avoid overheated oil catching fire. Carry out fumes discharging in accordance with the regulations in force by local laws for safety and technical restrictions.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.