

#### **MODEL**

F10000R

### **INSTALLATION SPECIFICATION SHEET**


These instructions must be used in conjunction with the 'General Installation Instructions' for Masport wood fires.

#### **CLEARANCE REQUIREMENTS**

This fire has been tested and complies to the Australian/New Zealand Standard AS/NZS 2918:2001 and all installations must be in accordance with the minimum clearances to combustibles indicated in these instructions.

The minimum clearances to combustables may be reduced if the combustable walls are shielded with an approved non-combustable material. Details of suitable materials and appropriate clearance reduction factors are present in Section 3 of AS/NZS 2918:2001.

#### POSITIONING YOUR FREE-STANDING WOODFIRE

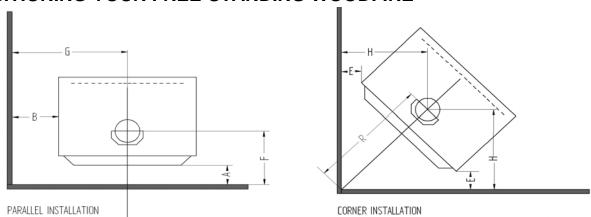

#### **NEW ZEALAND**

MINIMUM DISTANCES TO HEAT SENSITIVE WALLS (mm)

MODEL	FLUE HEAT SHIELD	Α	В	E	F	G	H	R§
	SINGLE SKIN S/S POLISHED, 920mm LONG	150	325	150	345	705	557	787
F10000R								

#### **AUSTRALIA**

MINIMUM DISTANCES TO HEAT SENSITIVE WALLS (mm)

MODEL	FLUE HEAT SHIELD	Α	В	Е	F	G	Н	R§


<sup>§</sup> Valid only when the room walls are at 90° to each other.

<sup>‡</sup> Note: Clearances are for fire hazard only. For durability of finishes or surfaces you should contact the relevant manufacturer for their specification. Masport accepts no responsibility for the deterioration of surfaces or finishes.

PRT. NO.	595770
DATE:	20.01.2012

# FLOOR PROTECTOR (Hearth) REQUIREMENTS PARALLEL INSTALLATION

MINIMUM FLOOR PROTECTOR DIMENSIONS IN mm

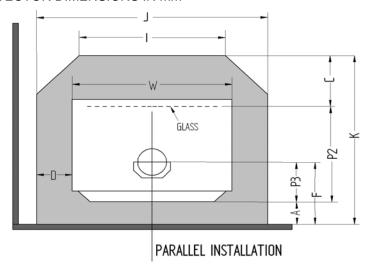

# DIMENSIONS IN THE TABLE ARE VALID ONLY WHEN THE FIRE IS EXACTLEY AT ITS MINIMUM ALLOWABLE WALL CLEARANCE.

#### **NEW ZEALAND**

MODEL	Flue Shield	Floor Protector height	A#	C#	D	F	I	J	K#	P2	P3	W	Floor Protector Type Ø
	*		150	300	103	345	665	965	1060	610	195	760	AFP
F10000R													
FIOOOOK													

<sup>\*</sup> SINGLE SKIN S/S POLISHED, 920mm

AFP = ASH FLOOR PROTECTOR

#### **AUSTRALIA - ALL WITH FLUE HEATSHIELD**

	MODEL	Flue Shield	Floor Protector height	A#	C#	D	F	I	J	K#	P2	<b>P</b> 3	W	Floor Protector Type Ø
Ī														
L														


NOTE: Where a fan is being fitted, you may prefer to increase the 'A' dimension to 100 mm to provide easier access for servicing. If so, the amount you add to 'A' to bring it to 100 mm must also be added to the 'C' and 'S' dimensions.

Ø for minimum constructional requirements see general installation instructions.

<sup>#</sup> Valid only when the fire is exactly at its minimum allowable wall clearance.

## FLOOR PROTECTORS (Hearth) REQUIREMENTS CORNER INSTALLATION

MINIMUM FLOOR PROTECTOR DIMENSIONS IN mm

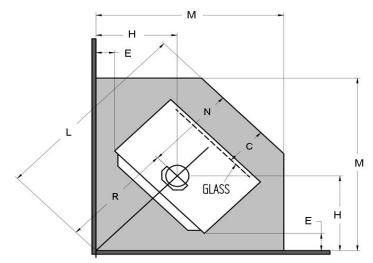

# DIMENSIONS IN THE TABLE ARE VALID ONLY WHEN THE FIRE IS EXACTLEY AT ITS MINIMUM ALLOWABLE WALL CLEARANCE.

#### **NEW ZEALAND**

MODEL	Flue Shield	Floor Protector Distance above Floor	С	E	H#	L#	M#	N	R#	FLOOR PROTECTOR TYPE
	*		300	150	557	1502	1297	715	787	AFP
F10000R										
FIUUUUK										

\* SINGLE SKIN S/S POLISHED, 920mm


AFP = ASH FLOOR PROTECTOR

#### **AUSTRALIA**

MODEL	Flue Shield	Floor Protector Distance above Floor	С	E	Н#	L#	M#	N	R#	FLOOR PROTECTOR TYPE



#### FREE STANDING FIRE DIMENSIONS

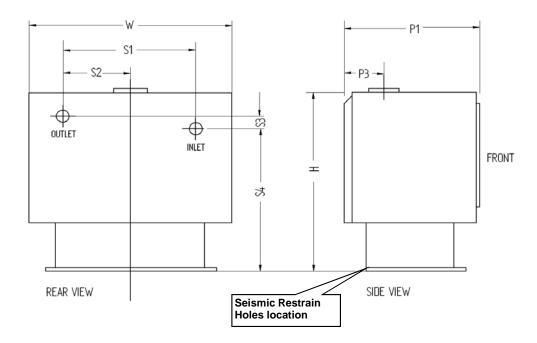

MODEL	P1	P3	Н	W	<b>S</b> 1	S2	S3	<b>S4</b>
F10000R	620	195	800	760	340	170	20	605

<u>Seismic Restrain</u> - In New Zealand and some part of Australia, it is required that the wood fire and floor protector are secured to prevent shifting in the event of an earthquake. This is best done by fastening the wood fire right through the protector to the floor, using two screws not less than 12 guage or the equivalent size of coach bolts or toggle fasteners.

### THIS FLUE INSTALLATION DIAGRAM BELOW IS VALID FOR NZ INSTALLATIONS ONLY. FOR INSTALLATIONS IN AUSTRALIA, PLEASE REFER TO SPECIFIC FLUE INSTALLATION SPECIFICATIONS.

